



# Gear Head: 5<sup>th</sup> Wheel Pad Application Notes


Simply lay pads onto 5<sup>th</sup> wheel surface



Pads can be broken. On bare metal, use softer interior material to create a sticky spot for the pad



Apply number of pads needed for your application

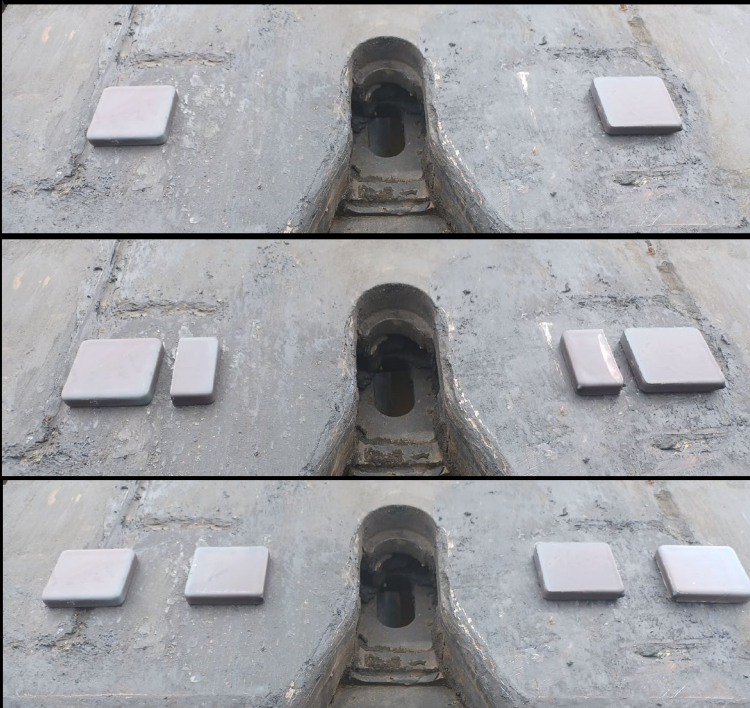

**NOTE! Improper Hookup Procedure**  
The trailer aimed too low on the 5<sup>th</sup> wheel will push the Gear Head Pads off the surface



Trailer clearance should be sufficient to allow the pads to pass under the trailer without contacting



Trailer edge should contact upper end of 5<sup>th</sup> wheel  
Pads should be well under trailer

